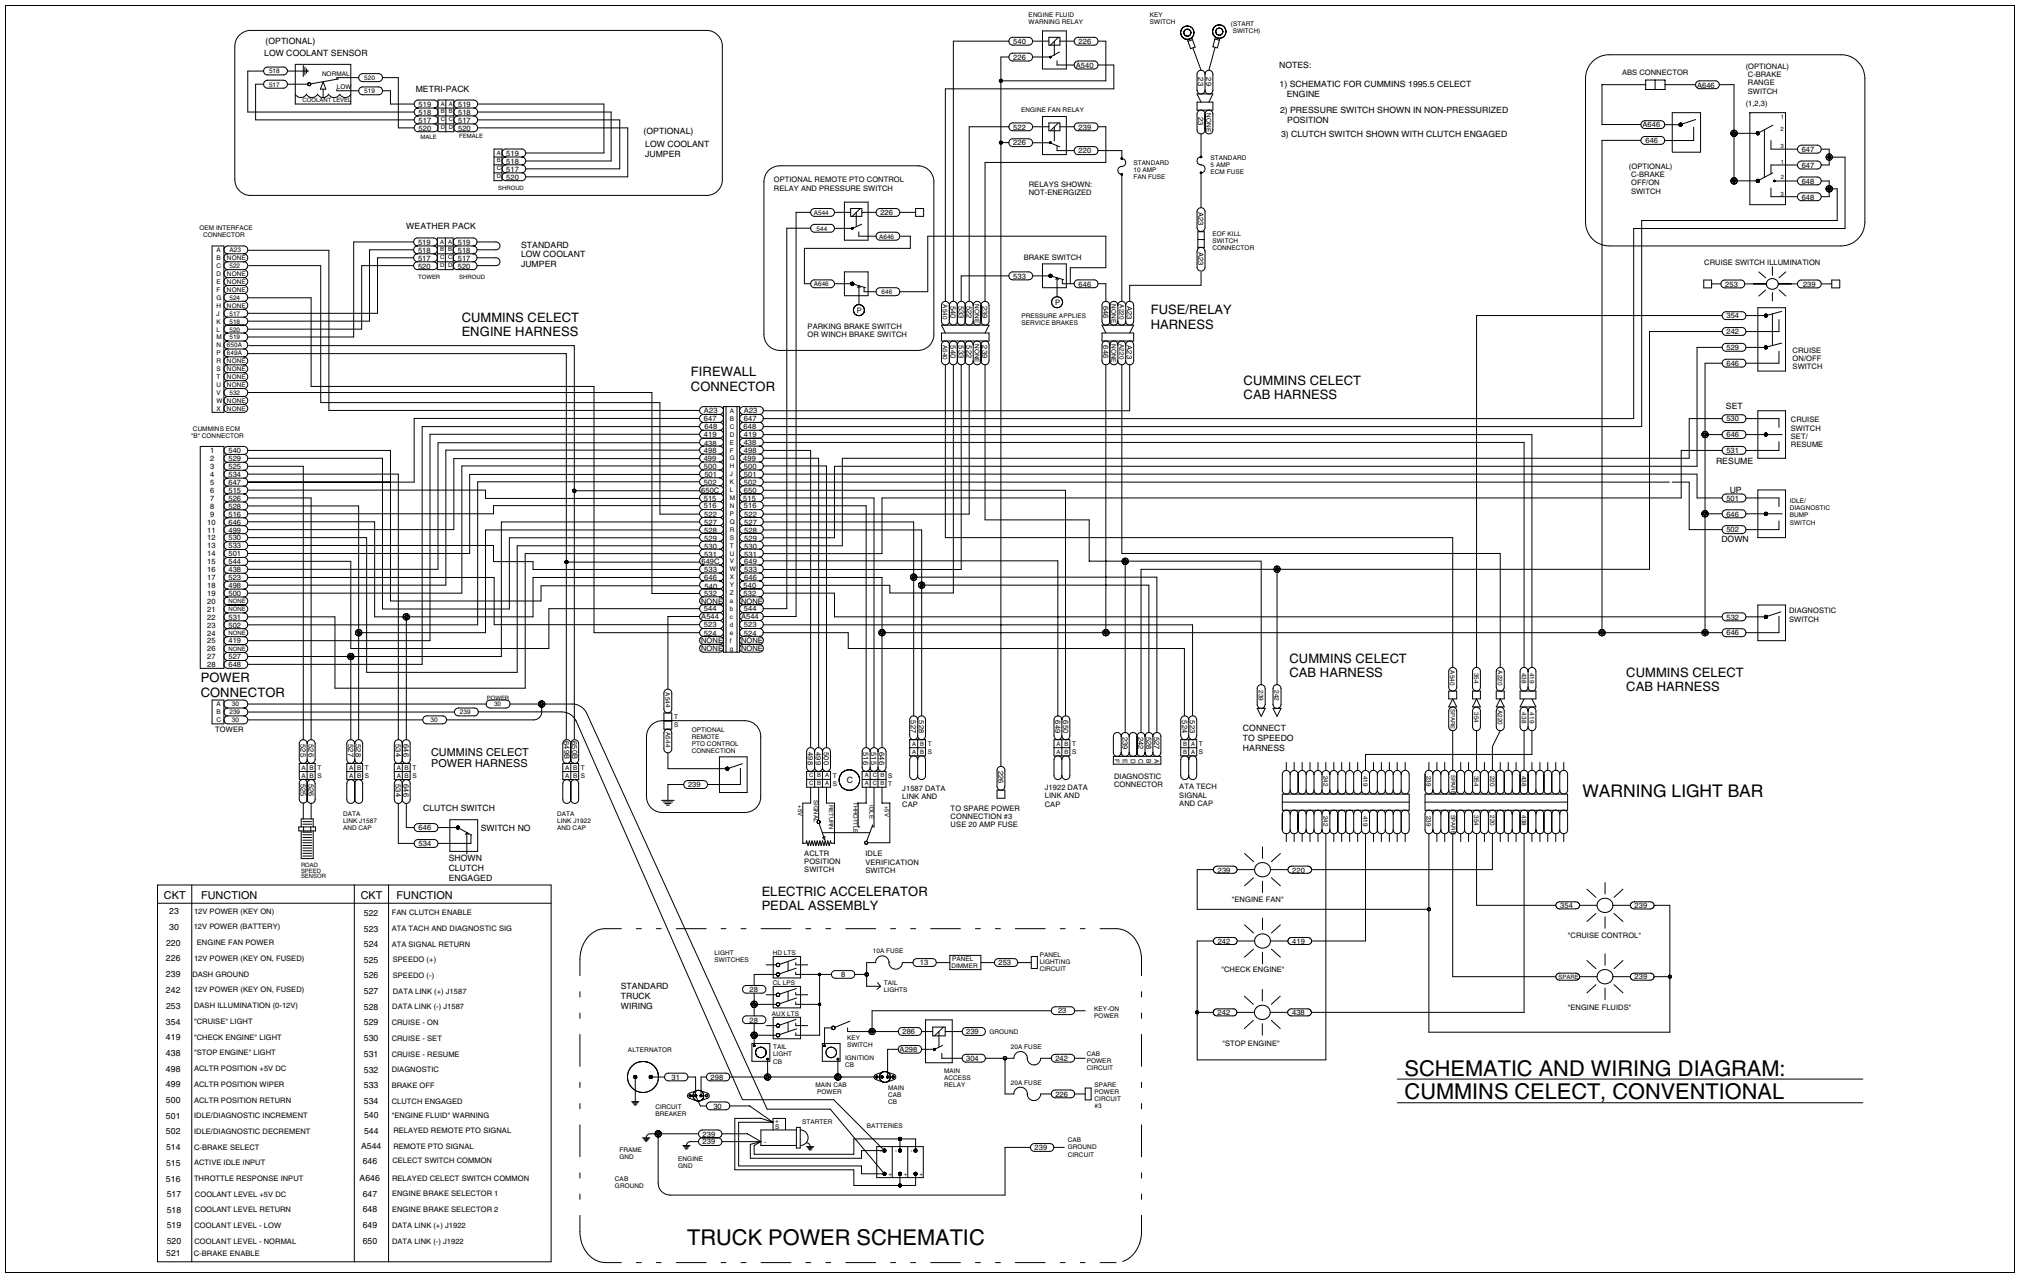

CKT	FUNCTION	CKT	FUNCTION
23	12V POWER (KEY ON)	522	FAN CLUTCH ENABLE
30	12V POWER (BATTERY)	523	ATA TACH AND DIAGNOSTIC SIG
220	ENGINE FAN POWER	524	ATA SIGNAL RETURN
226	12V POWER (KEY ON, FUSED)	525	SPEEDO (+)
239	DASH GROUND	526	SPEEDO (-)
242	12V POWER (KEY ON, FUSED)	527	DATA LINK (+) J1587
253	DASH ILLUMINATION (0-12V)	528	DATA LINK (-) J1587
354	"CRUISE" LIGHT	529	CRUISE - ON
419	"CHECK ENGINE" LIGHT	530	CRUISE - SET
438	"STOP ENGINE" LIGHT	531	CRUISE - RESUME
498	ACLTR POSITION +5V DC	532	DIAGNOSTIC
499	ACLTR POSITION WIPER	533	BRAKE OFF
500	ACLTR POSITION RETURN	534	CLUTCH ENGAGED
501	IDLE/DIAGNOSTIC INCREMENT	540	"ENGINE FLUID" WARNING
502	IDLE/DIAGNOSTIC DECREMENT	544	RELAYED REMOTE PTO SIGNAL
514	C-BRAKE SELECT	A544	REMOTE PTO SIGNAL
515	ACTIVE IDLE INPUT	646	CELECT SWITCH COMMON
516	THROTTLE RESPONSE INPUT	A646	RELAYED CELECT SWITCH COMMON
517	COOLANT LEVEL +5V DC	647	ENGINE BRAKE SELECTOR 1
518	COOLANT LEVEL RETURN	648	ENGINE BRAKE SELECTOR 2
519	COOLANT LEVEL - LOW	649	DATA LINK (+) J1922
520	COOLANT LEVEL - NORMAL	650	DATA LINK (-) J1922
521	C-BRAKE ENABLE		